

# HAM TIPS



A PUBLICATION OF THE RCA TUBE DIVISION

Vol. XVI, No. 1

March, 1956

## HAM-BAND CHARTS

### Useful Data on Ham Bands from 1.8 to 148 Mc

One of the most popular items ever to appear in *RCA Ham Tips* was the amateur-band frequency graph printed in the September-October, 1949 issue. In response to many requests from hams, we are devoting this issue to printing an up-to-date revision of that graph, plus other data thrown in for good measure.

Figure 1 is a graph showing the harmonic relation between the six amateur bands from 10 to 160 meters. It is designed to replace the slide-rule-and-aspirin method of solving a number of common amateur problems. Some examples:

(a) You have a 7,080-Kc crystal you want to use—in conjunction with multiplier stages—for operation on the 20-meter band. Instead of reaching for pencil and paper, glance at Figure 1. Run your eye down the line marked 7.08 Mc until you reach the 20-meter bars. You find that everything is OK if you plan to work CW or TT. If you're a 'phone man, you'd better reach for another crystal.

Conversely, Figure 1 may be used to determine quickly the ranges to be covered by intermediate stages as you multiply to higher frequencies.

(b) You decide that most of your time will be spent working 'phone on the 20-meter band. Your present VFO covers the range of 3,500 to 4,000 Kc. Figure 1 shows you that (after multiplying frequency) only 1/20 of your VFO dial will be useful to you. A modification of the VFO bandspread system might be in order. Thus Figure 1 is also useful for

determining the *relative* sizes of these six bands as you multiply frequency.

Figure 2, on the other hand, shows the *absolute* sizes of the ham bands from 10 to 80 meters. (The 160-meter band is not shown here because it is sub-divided on a geographical basis.) For example, this graph makes it clear that there is 12 times as much room on the 'phone portion of the 10-meter band as there is on the 'phone portion of the 20-meter band.

Because the 2-, 6-, and 11-meter bands are not easily related to the lower bands, they are treated separately. Figure 3 is a chart that shows useful sub-harmonics of the band limits of these three bands. For example, Figure 3 shows that a VFO covering the range of 8.000 Mc to 8.222 Mc would—after the frequency had been multiplied 18 times—spread the 2-meter band across the entire dial. Or, if you have a 6,770-Kc crystal, Figure 3 indicates that after quadrupling you would be within the limits of the 11-meter band.

Note that frequencies in Figure 3 have been rounded off (where necessary) on the "high side" at the lower band-edge limits, and on the "low side" at the upper band-edge limits.

All data shown in Figures 1, 2, and 3 represent the latest FCC rulings. Don't take it out on *Ham Tips* if you hear other services operating in "ham bands." Regulations in other parts of the world may allow broadcast, aeronautical or other services to use portions of these bands. Similarly, some foreign hams may be permitted to use ham bands slightly larger than ours. They may be "in the clear"—but *you* won't be if you try to zero-beat them.



Figure 1. Graph of amateur bands from 10 to 160 meters, showing sub-band allocations and the harmonic relation between bands.

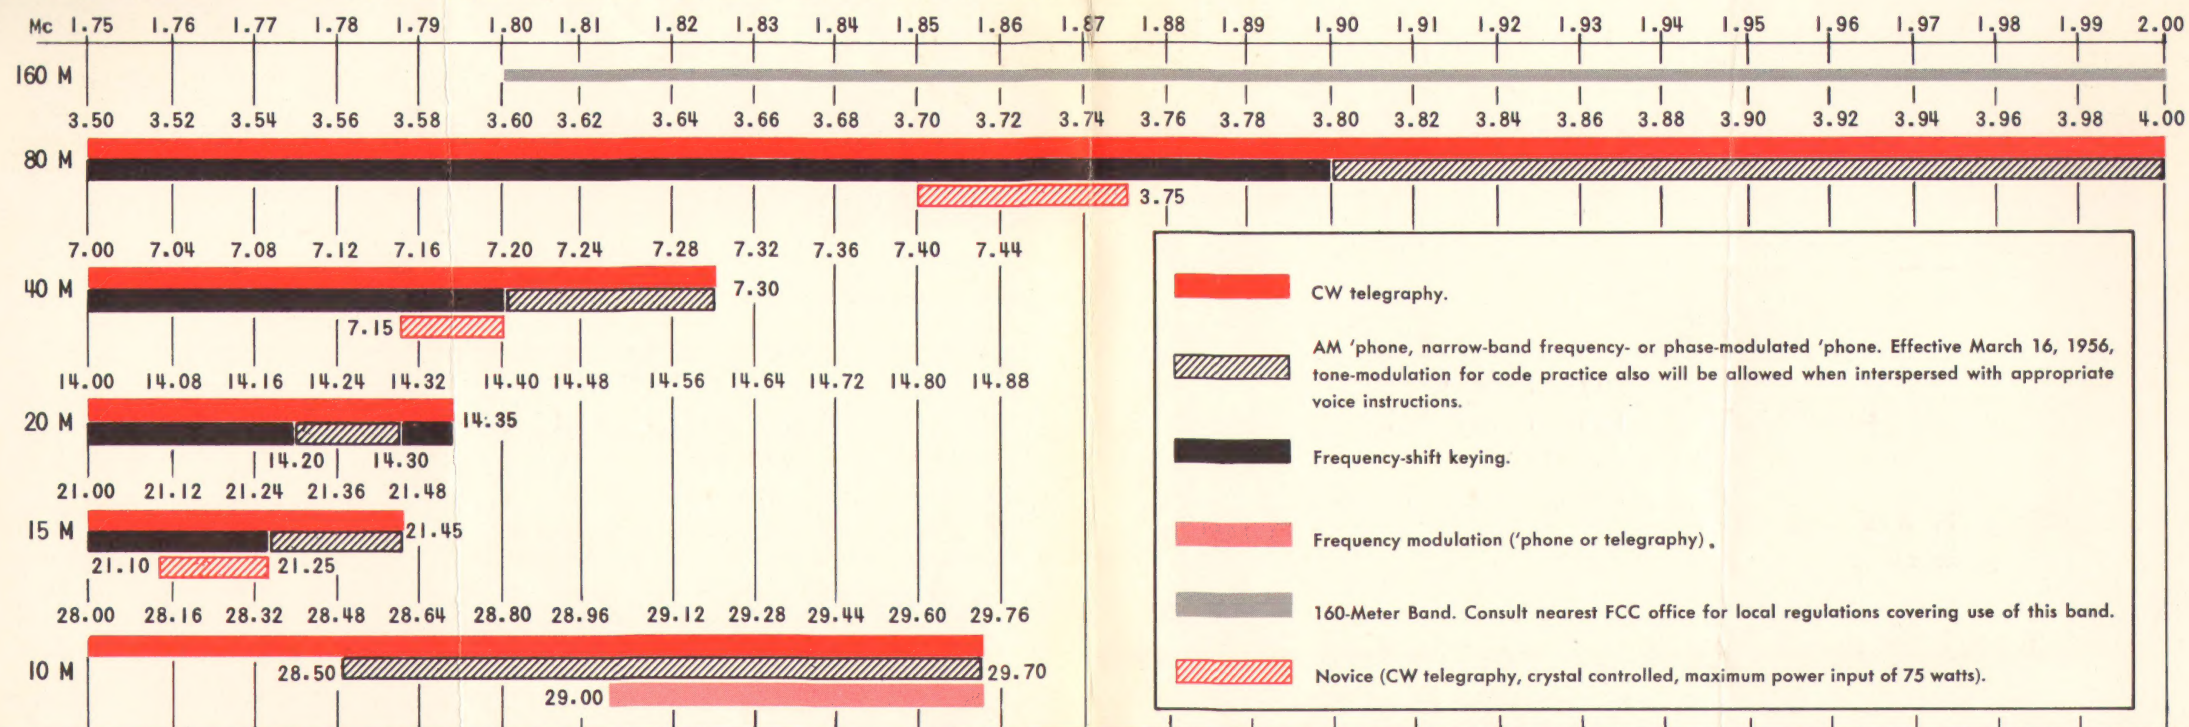


Figure 2. Graph of amateur bands from 10 to 80 meters, showing extent of each band in kilocycles. Key for sub-band allocations same as in Figure 1.

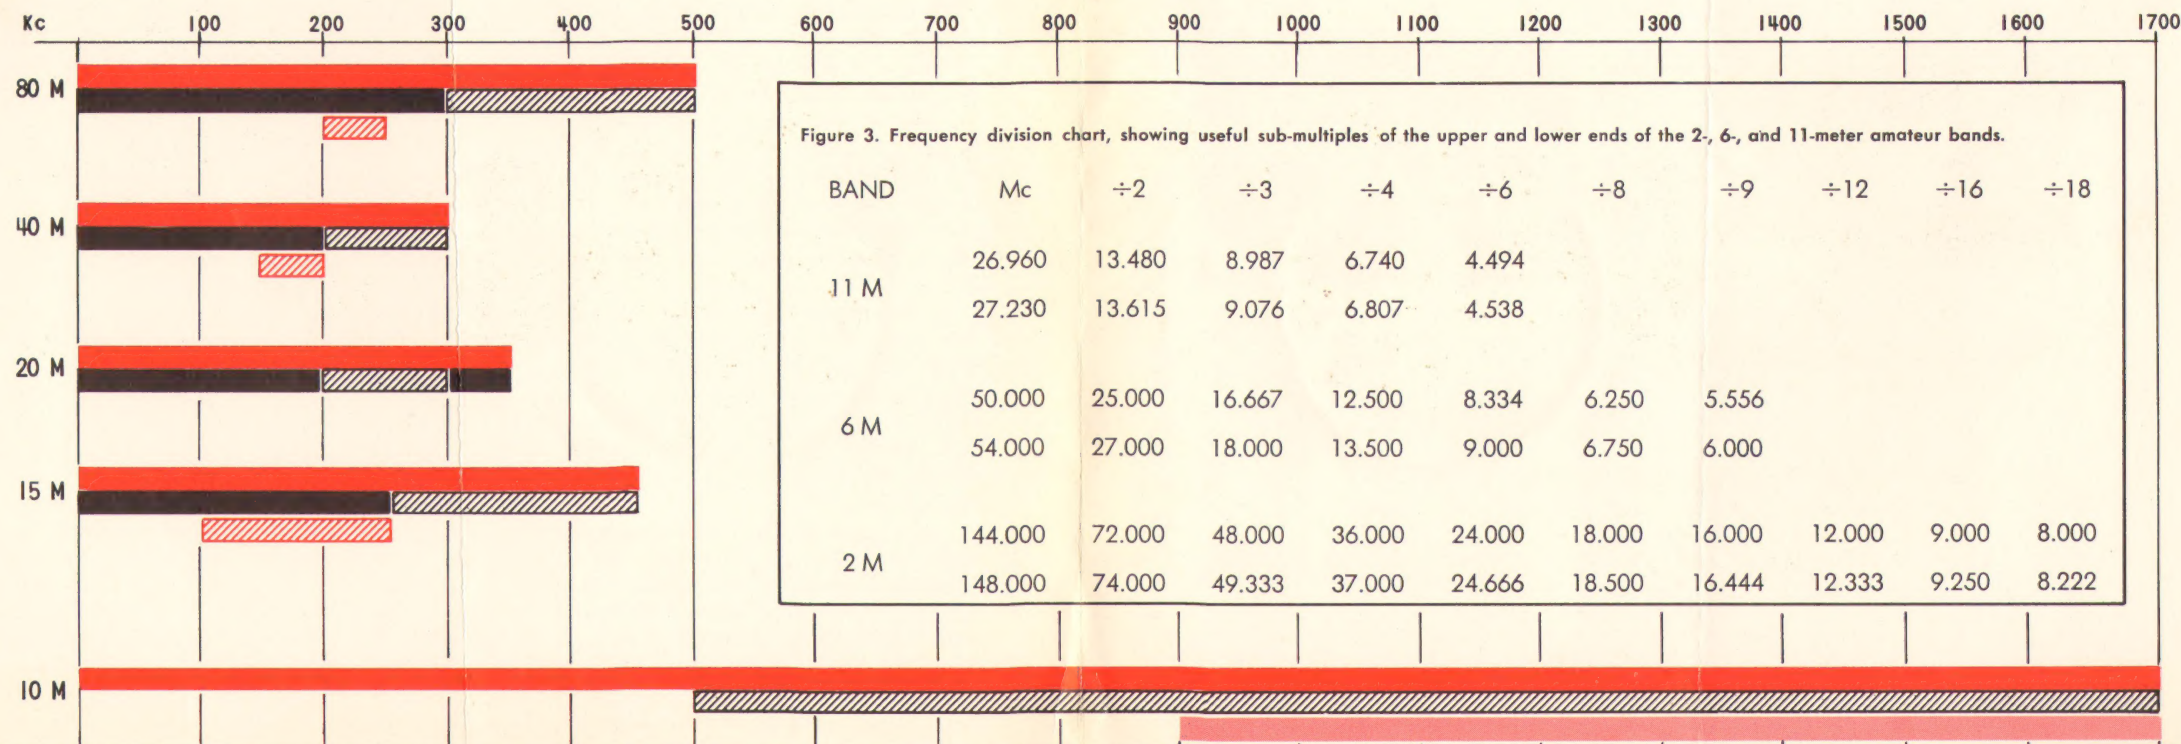


Figure 3. Frequency division chart, showing useful sub-multiples of the upper and lower ends of the 2-, 6-, and 11-meter amateur bands.

BAND	Mc	÷2	÷3	÷4	÷6	÷8	÷9	÷12	÷16	÷18
11 M	26.960	13.480	8.987	6.740	4.494					
	27.230	13.615	9.076	6.807	4.538					
6 M	50.000	25.000	16.667	12.500	8.334	6.250	5.556			
	54.000	27.000	18.000	13.500	9.000	6.750	6.000			
2 M	144.000	72.000	48.000	36.000	24.000	18.000	16.000	12.000	9.000	8.000
	148.000	74.000	49.333	37.000	24.666	18.500	16.444	12.333	9.250	8.222





**RCA HAM TIPS**  
is published by the  
RCA Tube Division,  
Harrison, N. J.  
It is available free  
of charge from  
RCA Distributors

**Harvey Slovik, Editor**  
**Charles Howard, W2QIH**  
**Technical Editor**

Copyright 1956  
Radio Corporation of America

IF IT'S ELECTRONICS  
CALL BARBEY'S FIRST

GEORGE D. BARBEY CO., Inc.  
Reading Pottstown  
Lancaster Lebanon

FORM 3547 REQUESTED




SEC. 34.66 P.L. &amp; R.

WHEN MAILING  
PLACE POSTAGE HERE




Devices and arrangements shown or described herein may use patents of RCA or others. Information contained herein is furnished without responsibility by RCA for its use and without prejudice to RCA's patent rights.

## Leading Amateur Designs ... use RCA Tubes

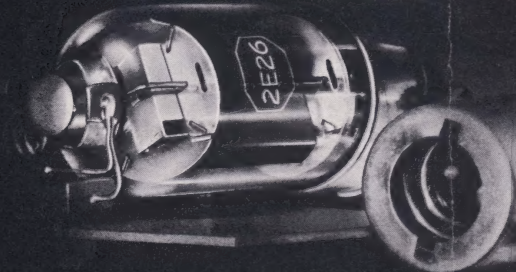

Close-up view of the "final" in the Gonset "Communicator"—showing the RCA-2E26.

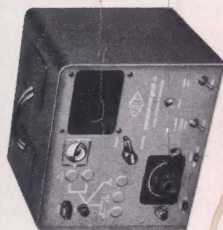

RCA-2E26 Beam Power Tube. Up to 40 watts ICAS input on cw; 27 watts phone. Full input up to 125 Mc; reduced input up to 175 Mc. Well-suited for mobile services. A 6AG7 drives it; a pair of 6V6-GT's, or a 6N7, modulates it.

Look at the popular Gonset *Communicator*, for example. In this compact mobile-or-fixed 2-meter station, the RCA-2E26 delivers a clean signal capable of covering a lot of territory.

Why do leading amateur and commercial designers recommend RCA Power Tubes for top performance? Because: (1) High-prevalence RCA Tubes deliver the power you need—at lower plate voltages, (2) RCA Tubes have enormous reserve of cathode emission to supply peak plate-current demands, (3) RCA Tubes give you more for your money—in life and watts input per dollar.

RCA Power Tubes—both beam power and triode types—are available at your RCA Tube Distributor. Walk in and name your type. For technical data on the 2E26, write RCA, Commercial Engineering, Harrison, N. J.



**TUBES FOR AMATEURS**  
RADIO CORPORATION OF AMERICA